



Air for life

Installation regulations

Brink Home Flair (EU)

English



Contents

1	Introduction.	3
2	Brink Home Connecting instructions.	4
2.1	Installing PCB UWA-2E.	5
2.2	Connect appliance to internet.	5
2.2.1	Set up.	5
2.3	Create Brink Home account.	8
2.4	Add appliance in Brink Home Portal.	9
3	Brink Home portal.	10
3.1	User level.	10
3.2	User plus level.	11
3.3	Installer level.	14
3.4	Portal levels.	15
3.4.1	System list (only for installer)	16
3.4.2	System view.	17
3.4.3	Change device parameters.	18
3.5	Portal menu's.	19
3.5.1	Trend menu.	20
3.5.2	Warning menu.	22
3.5.3	System settings menu.	23
3.6	Portal lay-out.	25
4	Brink Home App.	26
4.1	System requirements.	26
4.2	login.	26
4.3	Operation Brink Home App.	28
4.3.1	Screen "Menu".	28
4.3.2	Screen "Home".	29
4.3.3	Screen "Info".	30
4.3.4	Screen "Errors".	30
4.3.5	Screen "Ventilation modes"	31

1 Introduction

Brink Home allows you to control and readout your appliance from anywhere in the world via the Brink Home portal or Brink Home app using a tablet, laptop or smartphone.

To use Brink Home with a Flair appliance, the (optional) Plus PBC UWA-2E is needed to be able to connect the appliance to internet.

Consult the UWA-2E manual on the Brink website for installation instructions.

To use the Brink Home Portal, you need a recent web browser. Update your browser if necessary.

This manual provides instructions on how to connect a Flair appliance to Brink Home and the functionality of the Brink Home portal and Brink Home app.

- The Brink Home Portal can be found at the following URL: **www.brink-home.com**.
- The Brink Home app is available for Apple and Android appliances and can be found in the relevant app store.

2 Brink Home Connecting instructions

Follow instructions below in given order to connect a Flair appliance to Brink Home:

1. Install PCB UWA-2E → [Installing PCB UWA-2E](#) -> page 5.
2. Connect appliance to internet → [Connect appliance to internet](#) -> page 5.
3. Registration Brink Home → [Create Brink Home account](#) -> page 8.
4. Add appliance in Brink Home Portal → [Add appliance in Brink Home Portal](#) -> page 9.

Note

To access the Brink Home portal and Brink Home app, you must register.

Note

The screens shown may differ depending on the user's brand and type of communication device (phone/tablet/laptop).

Note

This manual applies to communication devices with Android, Windows and Apple operating systems.

Note

Make sure the installed PCB UWA-2E is within Wi-Fi range when internet connection needs to be established via Wi-Fi.

Note

When a filter notification or fault message is active, a connection to the Internet can still be established.

Note

If the power to the appliance has been switched off and on again, the Wi-Fi connection to internet and the Brink Home Portal will automatically be re-established.

Note

Adding installations to your user account can only be done in the portal, not in the app.

Note

Note down created login details and passwords.

2.1 Installing PCB UWA-2E

Please consult the UWA-2E manual in the download section of the Brink website on how to install and connect the PCB UWA-2E to the appliance.


2.2 Connect appliance to internet

When the appliance and the UWA-2E have been completely installed, switch on the power and adjust settings as described below to connect the appliance to internet.

Settings can be changed through the display on the appliance, enter the settings menu by pressing the gear.

2.2.1 Set up


- 1 Go to menu 14.1 and set Type of Bus connection to InternalBus.

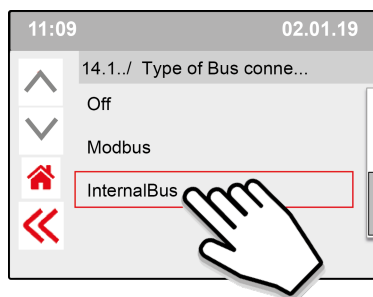

Note

Press << to confirm InternalBus-setting.

- 2 Go to menu 13.1 and set type of connection WLAN(Wi-Fi) or LAN.

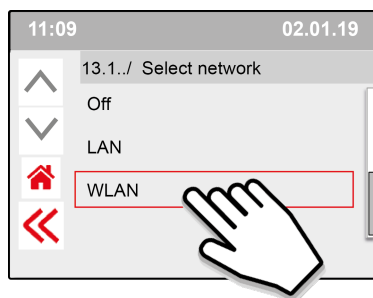


Note

Press << to confirm setting.



Wi-Fi

Go to menu 13.2 and Enter Wi-Fi network name
(Brink-Guests is used as example)

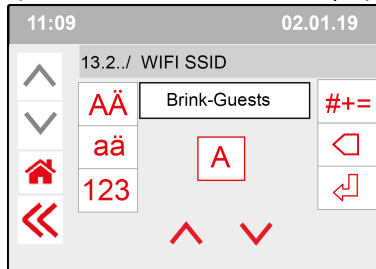

LAN


Go directly to step number 3 -
Enter and confirm Brink Home Password



Note

Press << to confirm Wi-fi network.

Go to menu 13.3 and enter the Wi-fi network password

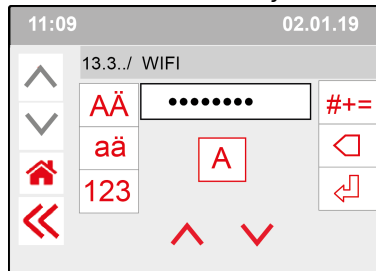

Note

Press << to confirm Wi-fi Password.


Wi-Fi specifications

- 802.11 b/g/n/e/i
- 802.11 n (2.4 GHz)
- Wi-Fi Protected Access (WPA)/WPA2/WPA2-Enterprise/Wi-Fi Protected Setup (WPS)

3 Go to menu 13.4 and create and enter a Brink Home password.

Password requirements:


At least 8 characters, with at least one lower-case and one upper-case letter as well as one number or special character.

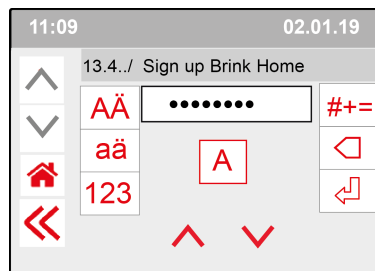


Note

Press << to confirm Brink-Home Password.

- 4 Check the connection in Main menu (could take a couple of minutes).

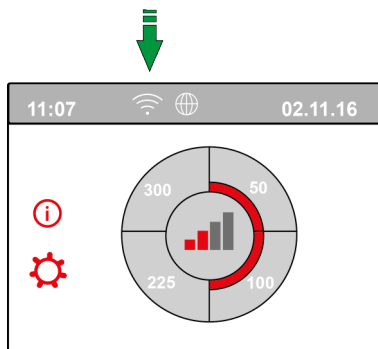

Successful connection Wi-Fi

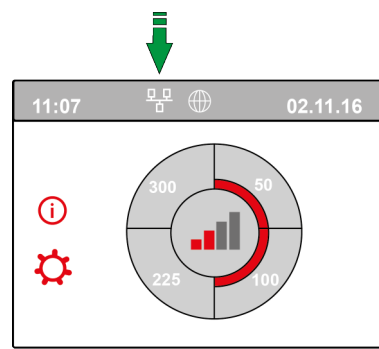

Successful connection LAN

- 5 Create a Brink Home account at www.Brink-Home.com, see → [Create Brink Home account](#) -> page 8.

2.3 Create Brink Home account

Note


The password of your Brink Home user account is not the same as the password of the appliance.

Note

Write down created passwords.

Follow steps below to create a Brink Home account.


1. Go to www.brink-home.com
2. Select: "register now".
3. Enter your e-mail address twice .
4. Select the desired language.
5. Choose a password you want to use for Brink Home and enter this twice Write down the password to remember it as well.
6. Accept the Terms and conditions and the Privacy statement.
7. Confirm the input with "Send Registration".
8. A confirmation e-mail is sent to the e-mail address you registered with.
9. Follow the instructions of this confirmation e-mail.
10. You can now log in with your e-mail address and created password..

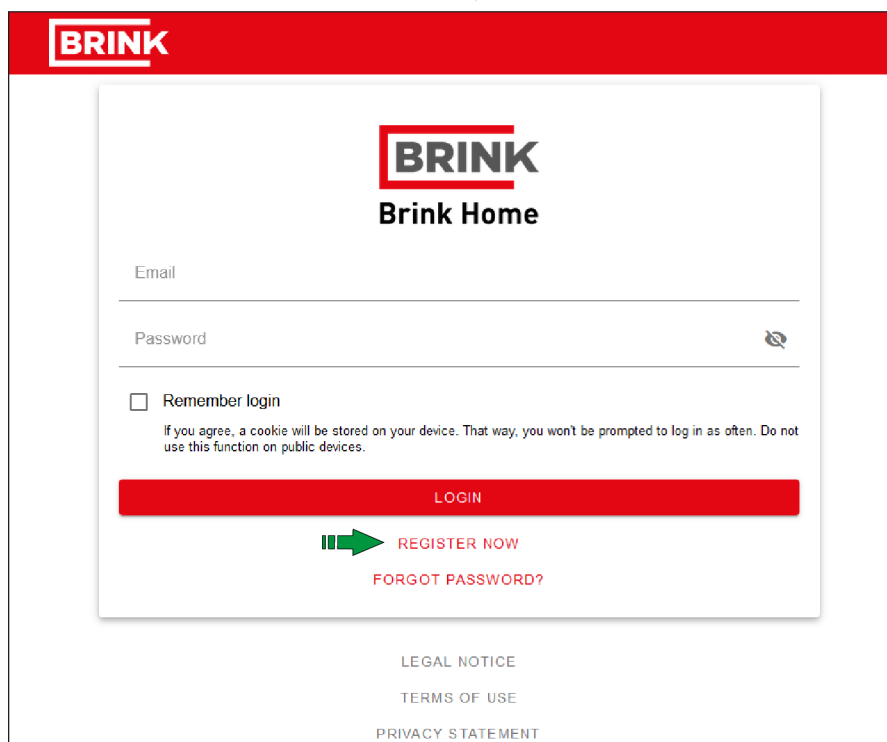

BRINK

Brink Home


Email

Password 

☐ Remember login

If you agree, a cookie will be stored on your device. That way, you won't be prompted to log in as often. Do not use this function on public devices.

LOGIN

 **REGISTER NOW**

FORGOT PASSWORD?

[LEGAL NOTICE](#)


[TERMS OF USE](#)

[PRIVACY STATEMENT](#)

2.4 Add appliance in Brink Home Portal

Make sure the appliance is connected to internet and registered in Brink Home → [Connect appliance to internet](#) -> page 5 and that a user account is created in the Brink Home portal → [Create Brink Home account](#) -> page 8.

1. Log in to the Brink Home portal (www.brink-home.com)
2. Select "Add system"

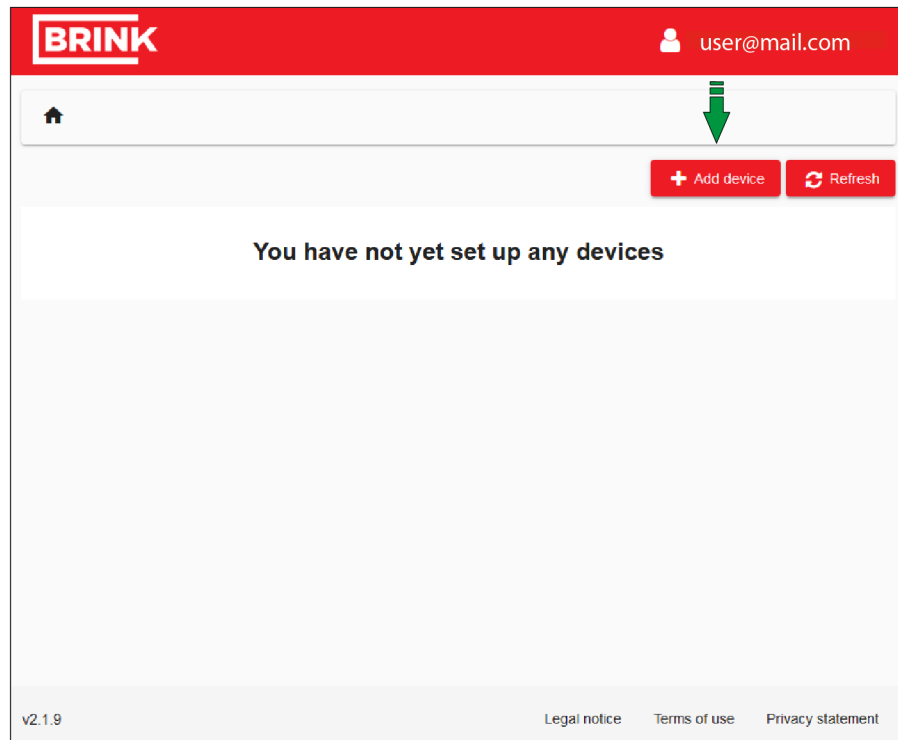

3. Enter the serial number of the appliance (enter the 12 numbers only).
4. Enter the password that was created at step 3 in Set up UWA-2E → [Set up](#) -> page 5.
5. Click "Add system" (The tile will become red after entering the serial number and password).

A screenshot of the 'Add system' form. The form has a title 'Add system'. Below the title, there are two input fields: 'Serial number' with the text 'example' and a character count '7 / 50', and 'Password' with a masked password '.....' and a toggle icon. At the bottom of the form, there are two buttons: 'Cancel' and 'Add system'.

6. The appliance is now shown in the system list.
7. The appliance can now be controlled in the Brink Home portal and Brink Home app.

3 Brink Home portal

There are 3 user levels in the Portal:

- User level (set by default after registration) → [User level](#) -> page 10.
- User plus level → [User plus level](#) -> page 11.
- Installer level → [Installer level](#) -> page 14.

3.1 User level

At default user level, you can view/adjust some settings in the appliance, see the table below.

To adjust more setting see → [User plus level](#) -> page 11 or → [Installer level](#) -> page 14.

BRINK user@mail.com

System list / System A - Flair 325

Flair 325

Properties

Device type	Flair 325
Software label	S2.01.02.0009
Status filter message	Not dirty
Number of days since filter reset	10

Device data


Ventilation mode	Level 0	
Operating mode	A Automatic mode	
Remaining duration user mode function	0 Min.	
Actual value air flowrate air supply	50 m³/h	
Actual value air flowrate air exhaust	49 m³/h	
Temperature fresh air	23.1 °C	
Supply temperature	23.9 °C	
Status bypass valve	Closed	
Status preheater	Off	
Relative humidity	0 %	
PPM eBus CO2 sensor 1	0 PPM	
PPM eBus CO2 sensor 2	0 PPM	
PPM eBus CO2 sensor 3	0 PPM	
PPM eBus CO2 sensor 4	0 PPM	

v1 Legal notice Terms of use Privacy statement

3.2 User plus level

You can select user plus level in the Brink Home portal to see or adjust multiple settings.


1. Register or login in the Brink Home Portal.
2. Click your user name in the top right of the screen.
3. Click "Account settings".
4. Click the arrow next to "Role" and select user plus.
5. Click "Save".

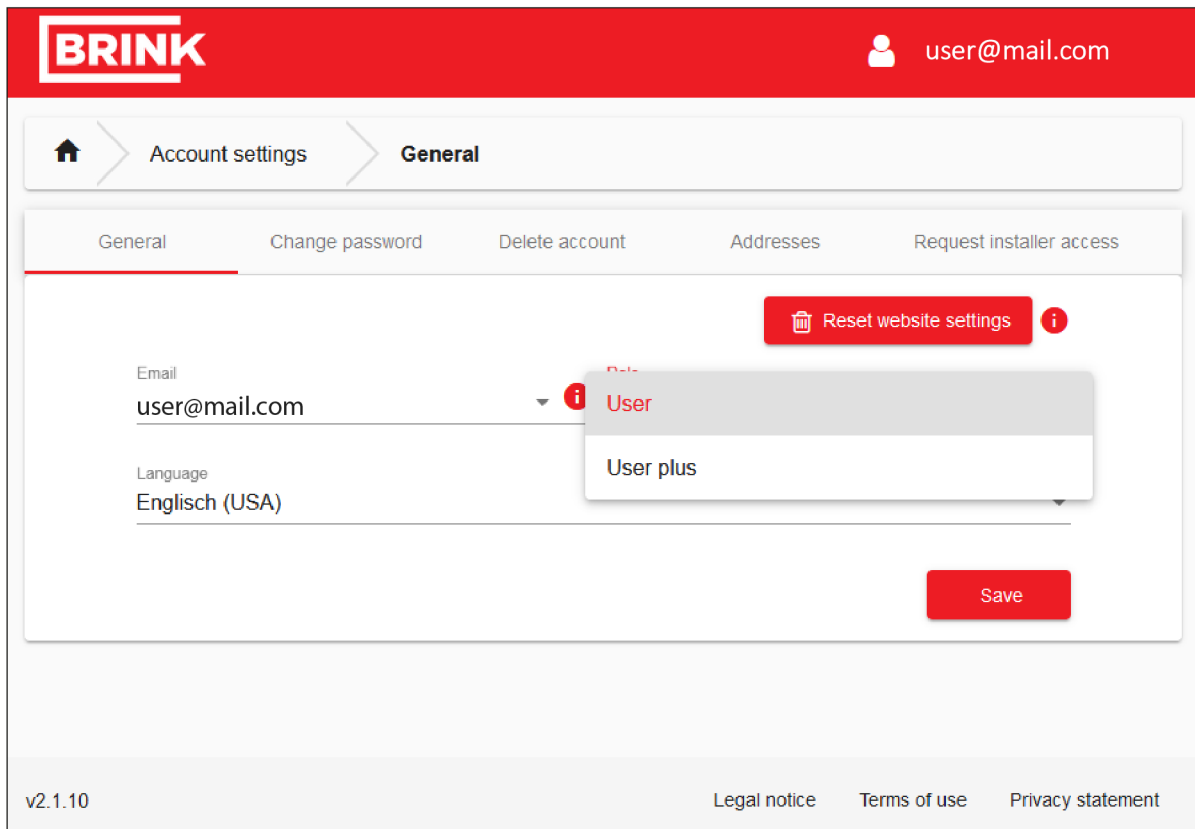

The screenshot shows the Brink Home portal interface. At the top, there is a red header with the "BRINK" logo on the left and a user profile icon with the email "user@mail.com" on the right. Below the header, a navigation bar contains a home icon, "Account settings", and "General". Under "Account settings", there are tabs for "General", "Change password", "Delete account", "Addresses", and "Request installer access". The "General" tab is active. In the main content area, there is a "Reset website settings" button with an information icon. Below this, the "Email" field shows "user@mail.com" and the "Language" field shows "Englisch (USA)". A dropdown menu is open next to the email field, showing two options: "User" (highlighted in grey) and "User plus". A "Save" button is located at the bottom right of the settings area. The footer contains the version "v2.1.10" and links for "Legal notice", "Terms of use", and "Privacy statement".

Example of Flair 325 settings in user plus level

Flair 325

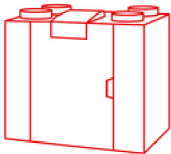

Device type	Flair 325
Software label	S3.01.05
Status filter message	No active filter message i
Number of days since filter reset	2

- Device data
- Flowrate
- Bypass
- Frost protection
- Filter message
- External heater
- CO2 sensor
- Humidity sensor
- Central heating + heat recovery
- Signal output
- Plus feature

Device data		
Control status active	Auto Modus	OK
Ventilation mode	Level 1	OK
Operating mode	Automatic mode	OK
Remaining duration user mode function	0 Min.	OK
Operation bypass valve	Auto mode	OK
Position multiple switch	1	OK
Status fan	Initialising	OK
Setpoint value air flowrate air supply	100 m³/h	OK
Actual value air flowrate air supply	99 m³/h	OK
RPM supply fan	960 RPM	OK
Supply air pressure	18 Pa	OK
Setpoint value air flowrate air exhaust	100 m³/h	OK
Actual value air flowrate air exhaust	100 m³/h	OK
RPM extract fan	925 RPM	OK
Air exhaust pressure	15 Pa	OK
Temperature fresh air	22.1 °C	OK
Supply temperature	22.8 °C	OK
Supply humidity	52.0 %	OK
Exhaust temperature	22.7 °C	OK
Exhaust humidity	52.0 %	OK
Status bypass valve	Closed	OK
Status preheater	Off	OK

Flowrate		
Ventilation mode - 0	50 m³/h	OK
Ventilation mode - 1	100 m³/h	OK
Ventilation mode - 2	150 m³/h	OK
Ventilation mode - 3	250 m³/h	OK
Imbalance permitted	Yes	OK
Imbalance fireplace	0 %	OK
Disbalance supply flow	0 %	OK
Disbalance exhaust flow	0 %	OK
Default fan setting	1	OK

3.3 Installer level

Note


Verifying your installer access request takes a few days. You will receive an e-mail when your request has been approved or rejected.

As an installer or professional user, you can request installer access to the Brink Home portal.

An installer's account is optimised to display multiple installations and an installer can view and change more appliance parameters.

Perform the following steps to apply for installer registration:

1. Register or login in the Portal.
2. Click on your user name at the top right of the screen.
3. Click "Account settings".
4. Click tab "Installer access".
5. Fill in all fields.
6. Click "Send request" to send your request.

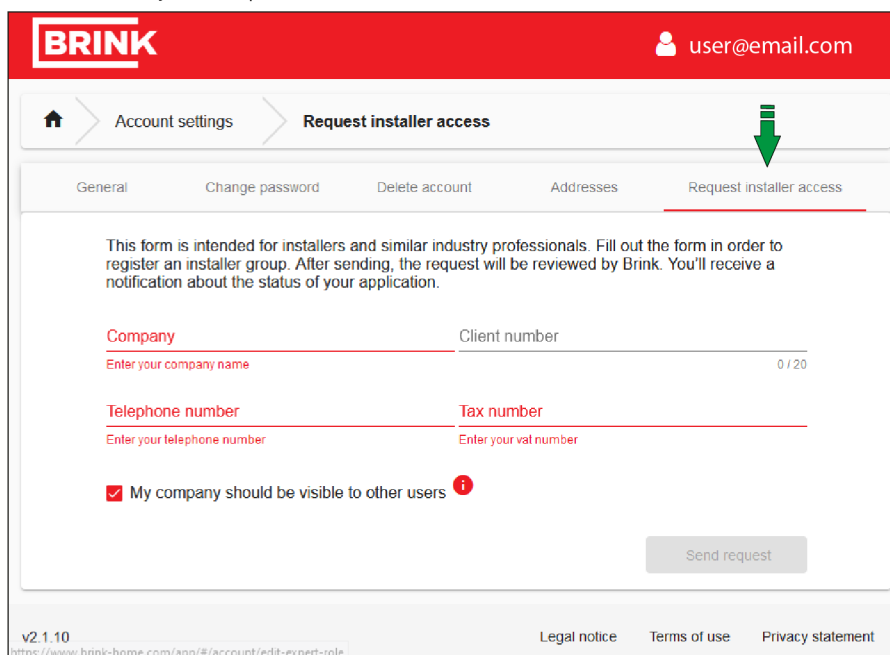

The screenshot shows the Brink Home portal interface. At the top, there is a red header with the 'BRINK' logo on the left and a user profile icon with the email 'user@email.com' on the right. Below the header, a navigation bar contains a home icon, 'Account settings', and 'Request installer access'. A green arrow points down to the 'Request installer access' tab, which is currently selected and underlined. The form area contains a message: 'This form is intended for installers and similar industry professionals. Fill out the form in order to register an installer group. After sending, the request will be reviewed by Brink. You'll receive a notification about the status of your application.' Below this message are four input fields: 'Company' (with a red underline and the text 'Enter your company name'), 'Client number' (with a character count '0 / 20'), 'Telephone number' (with a red underline and the text 'Enter your telephone number'), and 'Tax number' (with a red underline and the text 'Enter your vat number'). At the bottom of the form, there is a checkbox labeled 'My company should be visible to other users' which is checked, followed by a red information icon. A 'Send request' button is located at the bottom right of the form. The footer of the page includes the version 'v2.1.10', the URL 'https://www.brink-home.com/app/#/account/edit-expert-role', and links for 'Legal notice', 'Terms of use', and 'Privacy statement'.

3.4 Portal levels

The Brink Home Portal has 3 levels:

Level 1: The system list (only for if installer access has been granted)


A list of all systems that are registered to your account.

Level 2: The System view (default level)


Shows an overview of the selected system and its devices.

Level 3: The application level

View and change the system and device properties.

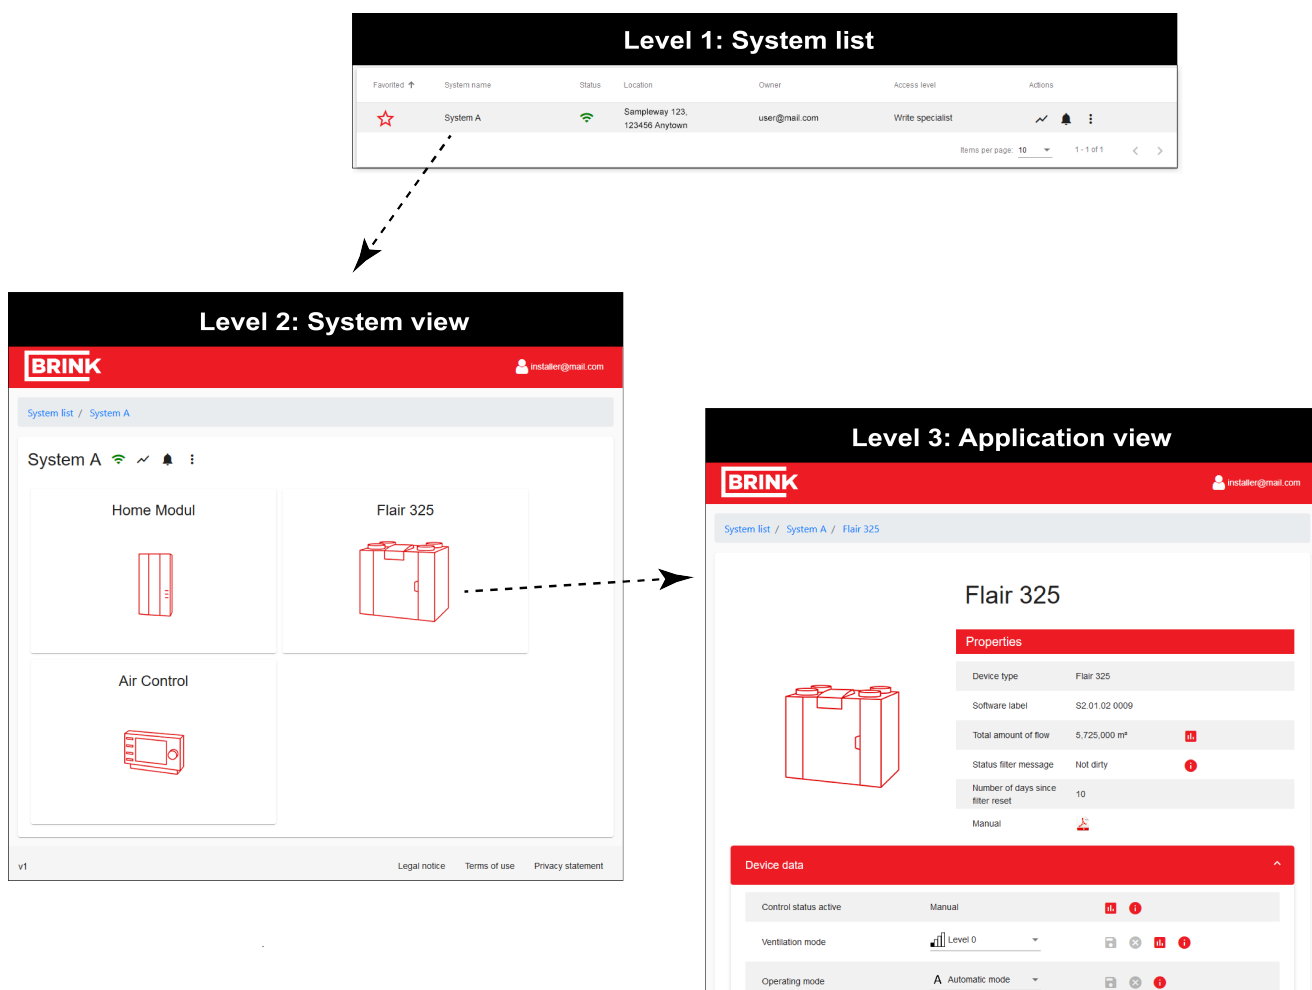

 The navigation bar indicates which level you are currently located:



3.4.1 System list (only for installer)

The system list is an overview of all systems that are either registered to your account or systems that have granted you a shared access. The system list can be filtered and by activating the star icon in the first column. A system will then be marked as favorite and will appear on the top of the list.

A system can be opened by clicking on its name. Alternatively, a direct action can be initiated by using the action icons in the last column. See → [Portal menu's](#) -> page 19 for the functions of these icons.

BRINK

installer@mail.com

System list

+ Add device

Refresh

Filter

No active filter

Favorited ↑	System name	Status	Location	Owner	Access level	Actions
	System A		Sampleway 123, 123456 Anytown	user@mail.com	Write specialist	

Items per page: 10 1 - 1 of 1 < >

v1


Legal notice

Terms of use

Privacy statement

3.4.2 System view


The system view gives you an overview of the system and all its devices.

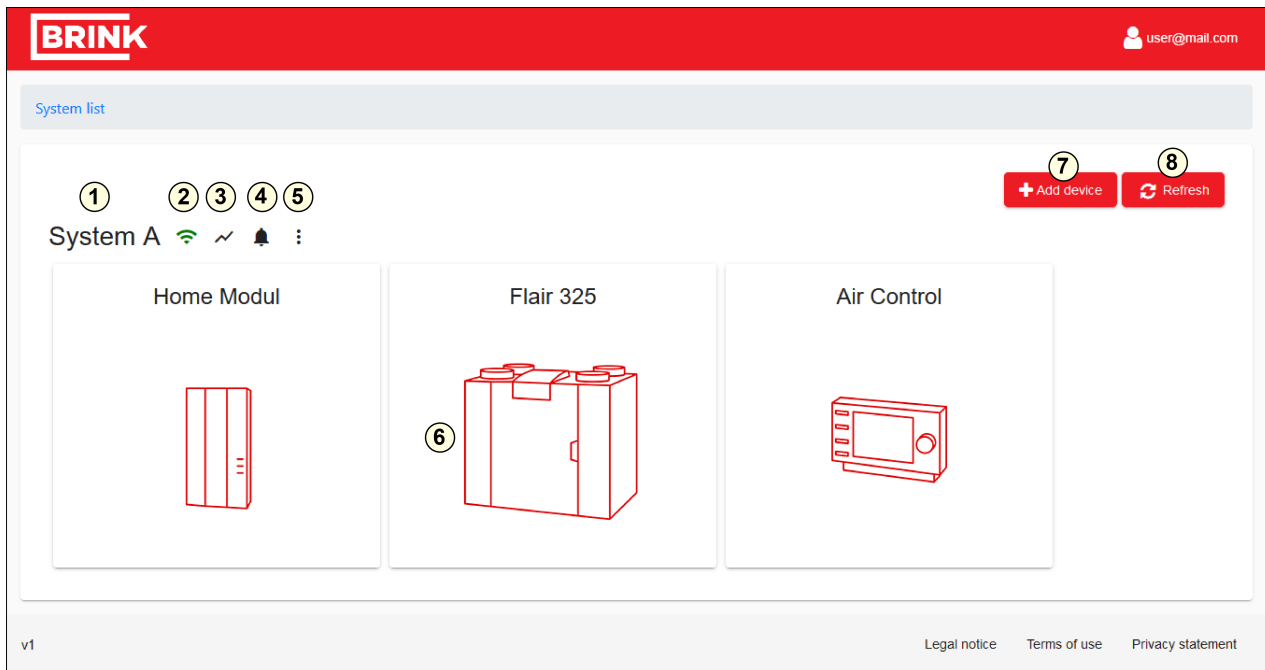


System view elements:

1. System name
2. Status : online/offline
3. Trend menu
4. Warning menu
5. System settings menu
6. Device selection
7. Add a system
8. Refresh view

- **System name:** The system name can be changed in the system settings.
- **Online/offline:** The icon next to the system name indicates the connection status of the current system.

 = online

 = offline

3.4.3 Change device parameters

By clicking on one of the device thumbnails in the system view, the device view will be opened.

BRINK

System list / System A - Flair 325

Flair 325

Properties

Device type	Flair 325
Software label	S2.01.02.0009
Status filter message	Not dirty
Number of days since filter reset	10

Device data

Ventilation mode	Level 0	Save	Discard	Graph	Info
Operating mode	Automatic mode	Save	Discard	Graph	Info
Remaining duration user mode function	0 Min.	Save	Discard	Graph	Info
Actual value air flowrate air supply	50 m³/h	Save	Discard	Graph	Info
Actual value air flowrate air exhaust	49 m³/h	Save	Discard	Graph	Info
Temperature fresh air	23.1 °C	Save	Discard	Graph	Info
Supply temperature	23.9 °C	Save	Discard	Graph	Info
Status bypass valve	Closed	Save	Discard	Graph	Info
Status preheater	Off	Save	Discard	Graph	Info
Relative humidity	0 %	Save	Discard	Graph	Info
PPM eBus CO2 sensor 1	0 PPM	Save	Discard	Graph	Info
PPM eBus CO2 sensor 2	0 PPM	Save	Discard	Graph	Info
PPM eBus CO2 sensor 3	0 PPM	Save	Discard	Graph	Info
PPM eBus CO2 sensor 4	0 PPM	Save	Discard	Graph	Info

v1

[Legal notice](#) [Terms of use](#) [Privacy statement](#)

All device parameters are listed here. Parameters which can be changed have a save and discard button next to the parameter. Once the parameters are modified, these icons become active and the user can either save or cancel his changes. The graph icon next to the parameters allows you to see a brief overview view of the parameter history. The last "i" icon gives you more detail about the range of the parameter.

Ventilation mode

Level 0

Save


Discard

Graph

Info


3.5 Portal menu's

There are three system menu's that can be accessed from the system view or directly from the last column of the system list (installer only):

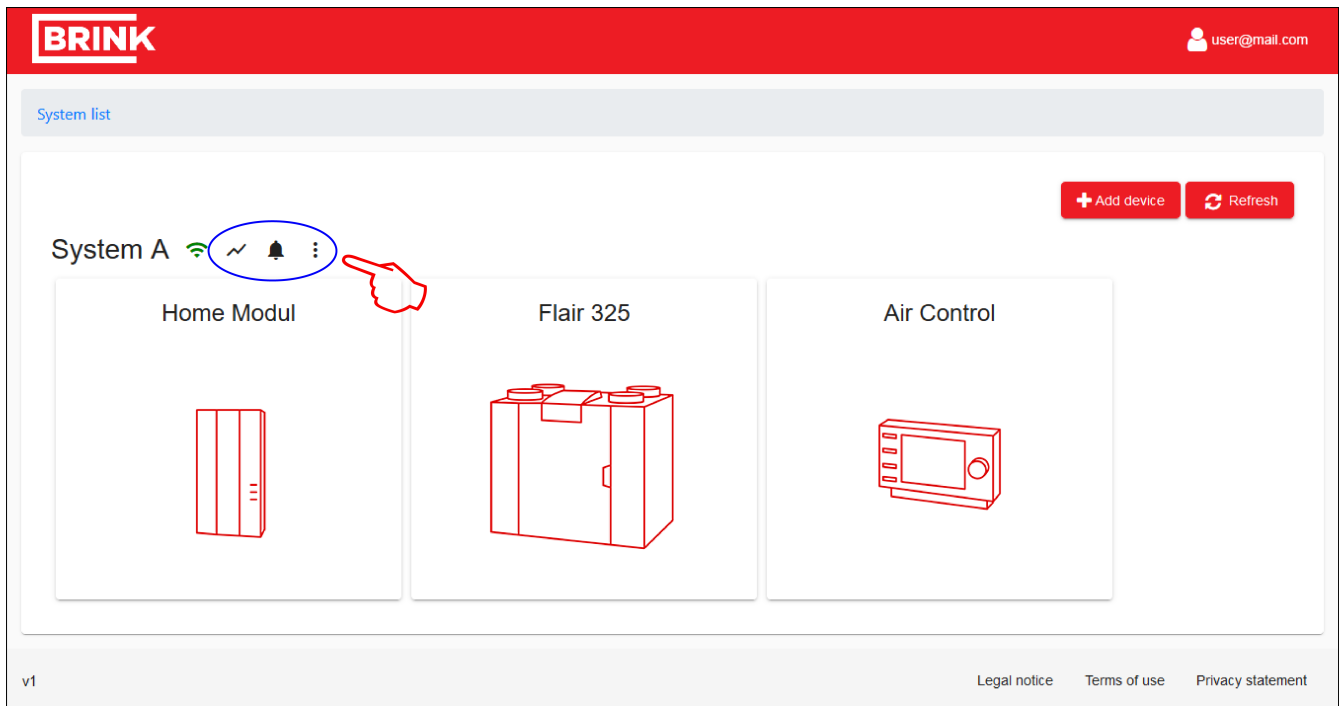


- ~ -Trend menu.
- 🔔 -Warning menu.
- ⋮ - System settings menu.

3.5.1 Trend menu

In the trend menu , historical or current appliance parameters/data can be consulted.

- On the first tab "Historical trend" you can consult historical data.
- On the second tab "Live trend" you can consult current data. (The data is updated every five seconds).
- On the third tab "Settings", select (up to 10) parameters/data you want to display in the "Historical" or "Live trend".
- In the "Historical trend" or "Live trend" tab, click on a parameter below the chart to temporarily hide it in the chart.
- Click 'Download' at the top right of the "Historical trend" tab to download the historical data for the past 32 days as a compressed CSV file.

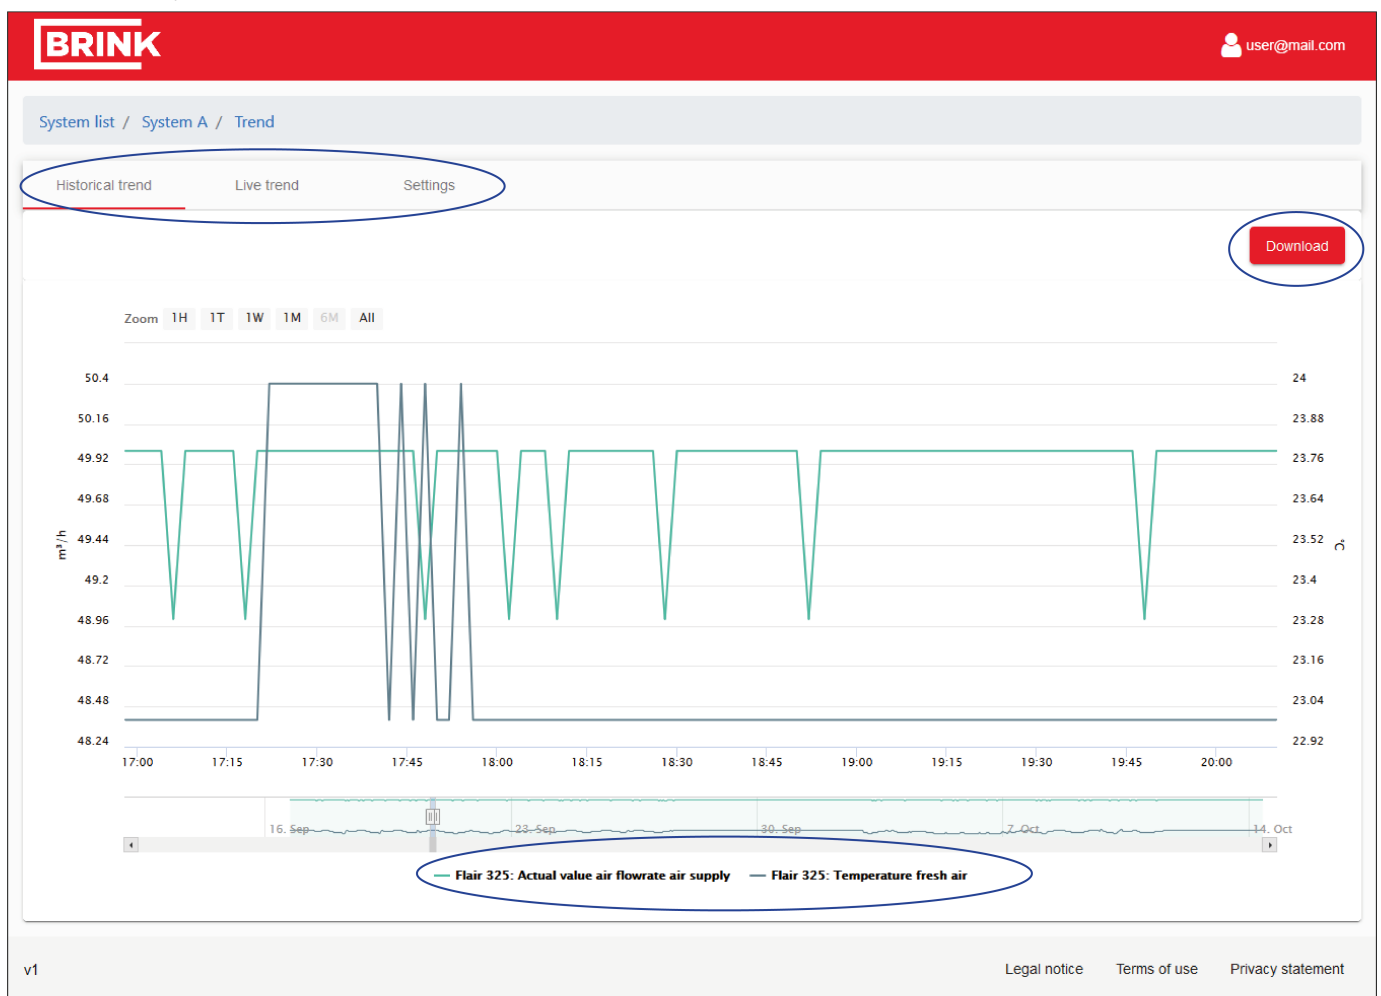

Change settings

You can select which data the graph will show in the settings tab.

A maximum of 10 parameters can be selected. It is also possible to temporarily hide a parameter in the chart view by clicking on the parameter name.

BRINK

user@mail.com

System list / System A / Trend

Historical trendLive trendSettings

Select parameters

Search

Selected	Device	Parameter	Unit
<input checked="" type="checkbox"/>	Flair 325	Temperature fresh air	°C
<input type="checkbox"/>	Flair 325	Actual value air flowrate air exhaust	m³/h
<input checked="" type="checkbox"/>	Flair 325	Actual value air flowrate air supply	m³/h
<input type="checkbox"/>	Flair 325	Ventilation mode	
<input type="checkbox"/>	Flair 325	PPM eBus CO2 sensor 1	PPM
<input type="checkbox"/>	Flair 325	PPM eBus CO2 sensor 2	PPM
<input type="checkbox"/>	Flair 325	PPM eBus CO2 sensor 3	PPM
<input type="checkbox"/>	Flair 325	PPM eBus CO2 sensor 4	PPM
<input type="checkbox"/>	Flair 325	Relative humidity	%
<input type="checkbox"/>	Flair 325	Status bypass valve	
<input type="checkbox"/>	Flair 325	Status preheater	
<input type="checkbox"/>	Flair 325	Supply temperature	°C

Send trend data (for installers only)

Users with installer access can have a log file sent by e-mail automatically. To set up automatic sending of system data, click the '+ Add' button to add an e-mail address and set the interval for sending.




BRINK

installer@mail.com

System list / System A / Trend

Historical trendLive trendSettingsShipping

+ Add

Recipient	Interval	Actions
user@mail.com	timeSeriesReceiverPeriods.Weekly	  

Items per page 10 1 - 1 of 1 < >


v1Legal noticeTerms of usePrivacy statement


Direct sending (installer only)

After the setup of a e-mail address. Direct sending of the current system is possible by using the mail button




3.5.2 Warning menu

The Warning menu  gives an overview of all error notifications that occurred within the system.

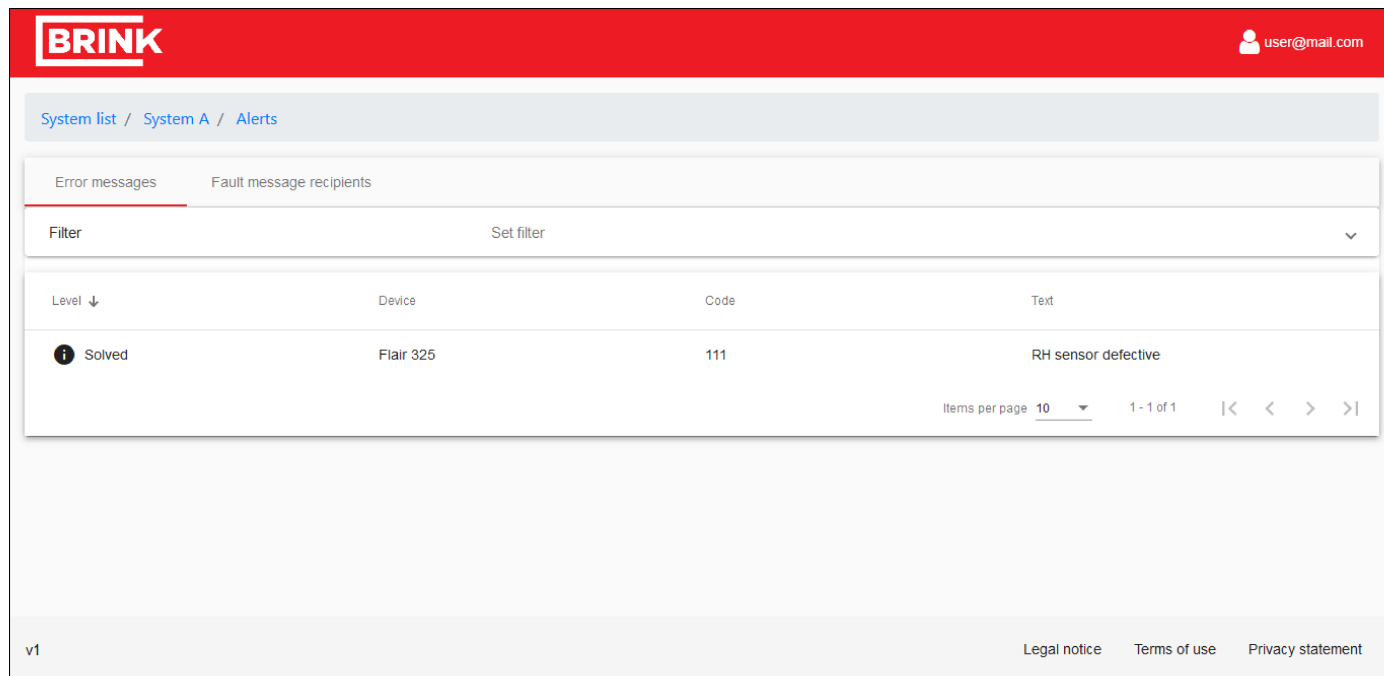


The screenshot shows the BRINK web interface. At the top is a red header with the BRINK logo on the left and a user profile icon labeled 'user@mail.com' on the right. Below the header is a breadcrumb trail: 'System list / System A / Alerts'. The main content area has two tabs: 'Error messages' (active) and 'Fault message recipients'. Below the tabs is a 'Filter' section with a 'Set filter' button and a dropdown arrow. A table displays one alert:

Level ↓	Device	Code	Text
 Solved	Flair 325	111	RH sensor defective

At the bottom right of the table, there is pagination information: 'Items per page 10', '1 - 1 of 1', and navigation arrows. The footer contains 'v1' on the left and links for 'Legal notice', 'Terms of use', and 'Privacy statement' on the right.

By navigating to the Fault message tab it is also possible to send error notifications to an e-mail address. Here you can add an e-mail address, choose a subject, specify if you want to be notified by occurring errors/ solved errors and if you like to receive notifications if the system is online or offline.

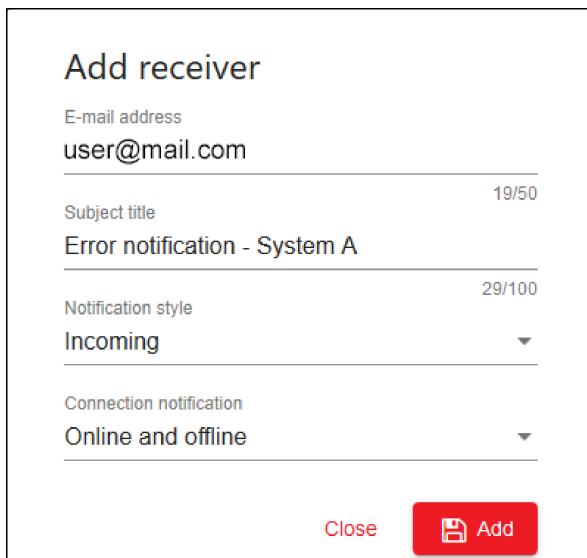


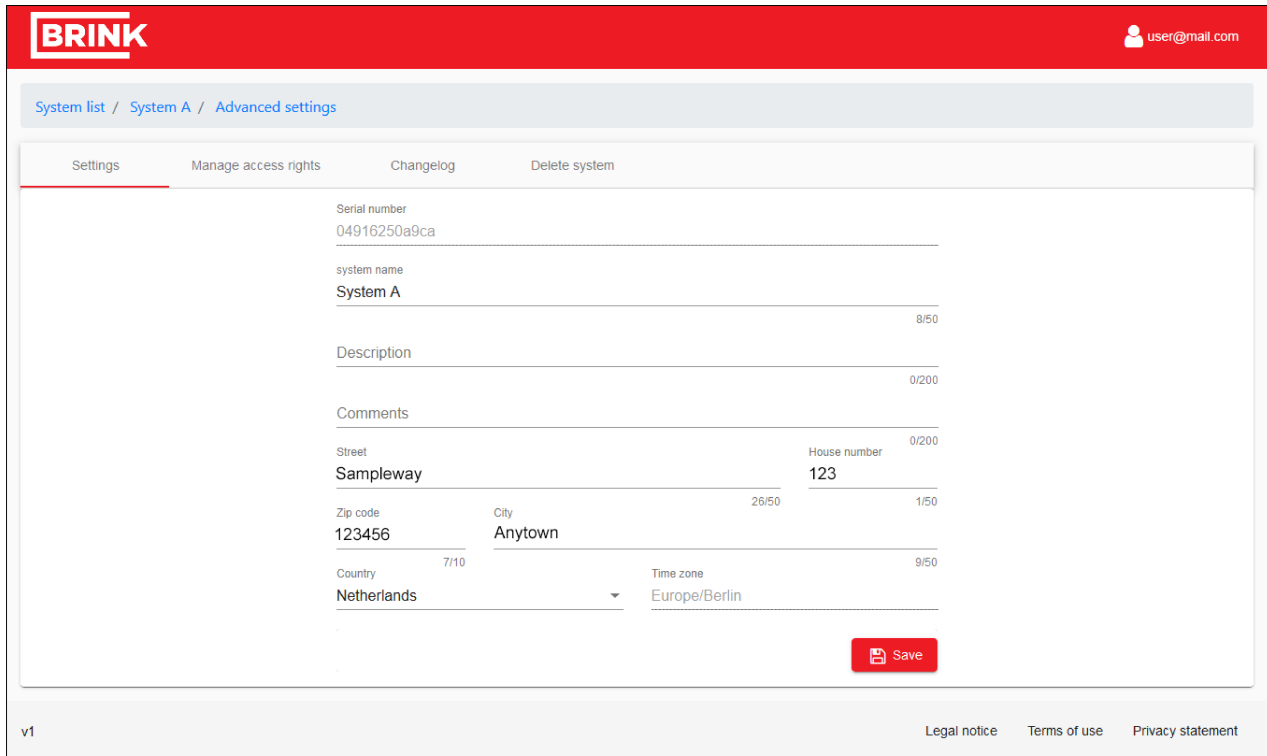
The 'Add receiver' dialog box contains the following fields and options:

- E-mail address:** user@mail.com (19/50 characters)
- Subject title:** Error notification - System A (29/100 characters)
- Notification style:** Incoming (dropdown menu)
- Connection notification:** Online and offline (dropdown menu)

At the bottom right, there are two buttons: 'Close' and 'Add' (with a save icon).

3.5.3 System settings menu


In the settings tab  you can change or add your system data. Here, the system name and location can be added or changed.







The screenshot shows the 'Advanced settings' page for 'System A'. The page has a red header with the 'BRINK' logo and a user profile 'user@mail.com'. Below the header is a breadcrumb trail: 'System list / System A / Advanced settings'. The main content area has four tabs: 'Settings' (active), 'Manage access rights', 'Changelog', and 'Delete system'. The 'Settings' tab contains several form fields: 'Serial number' (04916250a9ca), 'system name' (System A), 'Description' (empty), 'Comments' (empty), 'Street' (Sampleway), 'House number' (123), 'Zip code' (123456), 'City' (Anytown), 'Country' (Netherlands), and 'Time zone' (Europe/Berlin). Each field has a character count (e.g., 8/50 for system name). A red 'Save' button is at the bottom right. The footer shows 'v1' and links for 'Legal notice', 'Terms of use', and 'Privacy statement'.

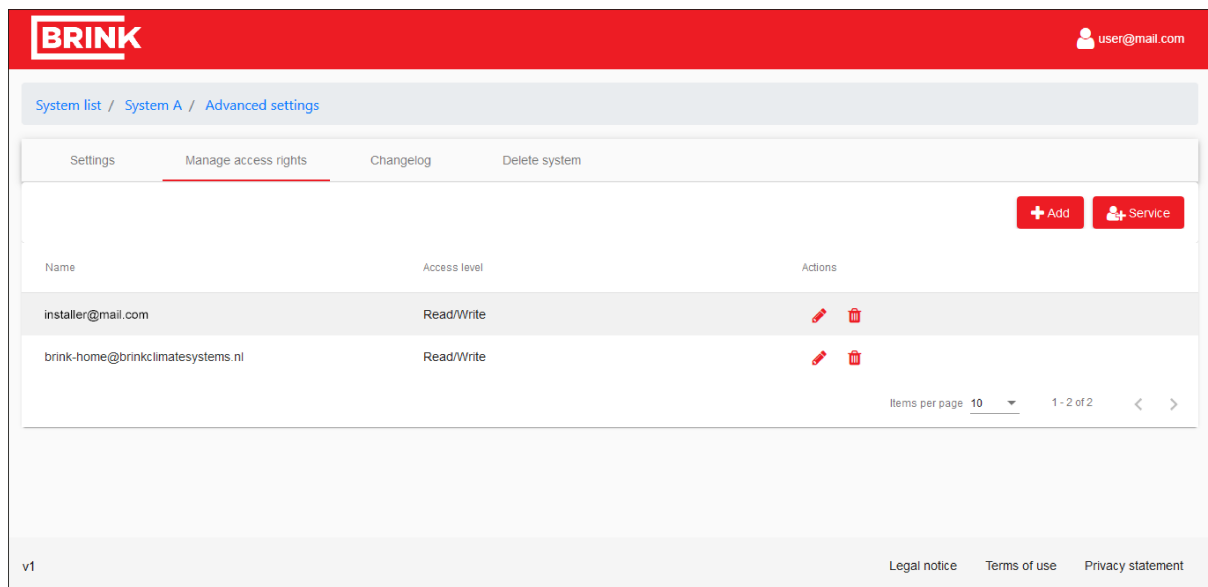Manage access rights

In the second tab "Manage access rights" it is possible to give another user remote access to your system. By default, Brink has a right to view your system. Other users can be added or removed. With the service button, you can instantly give remote access to the Brink service department.



The screenshot shows the 'Manage access rights' page for 'System A'. The page has a red header with the 'BRINK' logo and a user profile 'user@mail.com'. Below the header is a breadcrumb trail: 'System list / System A / Advanced settings'. The main content area has four tabs: 'Settings', 'Manage access rights' (active), 'Changelog', and 'Delete system'. The 'Manage access rights' tab contains a table with two columns: 'Name' and 'Access level'. The table has two rows: 'installer@mail.com' with 'Read/Write' access and 'brink-home@brinkclimatesystems.nl' with 'Read/Write' access. Each row has an 'Actions' column with edit and delete icons. There are two red buttons at the top right: '+ Add' and '+ Service'. The footer shows 'v1' and links for 'Legal notice', 'Terms of use', and 'Privacy statement'.

Name	Access level	Actions
installer@mail.com	Read/Write	 
brink-home@brinkclimatesystems.nl	Read/Write	 

Changelog

The changelog registers records of the last changes that have been made in the portal.

BRINK user@mail.com

System list / System A / Advanced settings

Settings Manage access rights **Changelog** Delete system

Refresh

Filter Set filter

Date and time ↓	Device	Parameter	User	Old value	New value
11/10/2019 09:05:37	Flair 325	Bypass temperature	installer@mail.com	35 °C	20 °C
11/10/2019 09:05:19	Flair 325	Bypass temperature	installer@mail.com	22 °C	35 °C
11/10/2019 09:04:15	Flair 325	Operation bypass valve	installer@mail.com	Bypass open	Bypass closed
27/08/2019 11:30:10	Flair 325	Ventilation mode	installer@mail.com	Level 3	Level 1
27/08/2019 11:29:41	Flair 325	Ventilation mode	installer@mail.com	Level 1	Level 3

Items per page 10 1 - 5 of 5 < >

v1 Legal notice Terms of use Privacy statement

Delete a system or your remote access rights

The last tab allows you to completely delete the system from the portal. After deletion the system data will also be deleted.

The product can be added again to the portal by other users who have access to the serial number and password.

BRINK user@mail.com

System list / System A / Advanced settings

Settings Manage access rights Changelog **Delete system**

Are you sure, you want to delete this system?


Delete

Note

In case you are not the owner of the system and have only been granted access rights; only those access rights will be deleted and the system will remain linked to its owner. If you've deleted your access rights, you're not able to view or access this system any longer.

3.6 Portal lay-out

An overview of all parts of the portal (after linking a system):

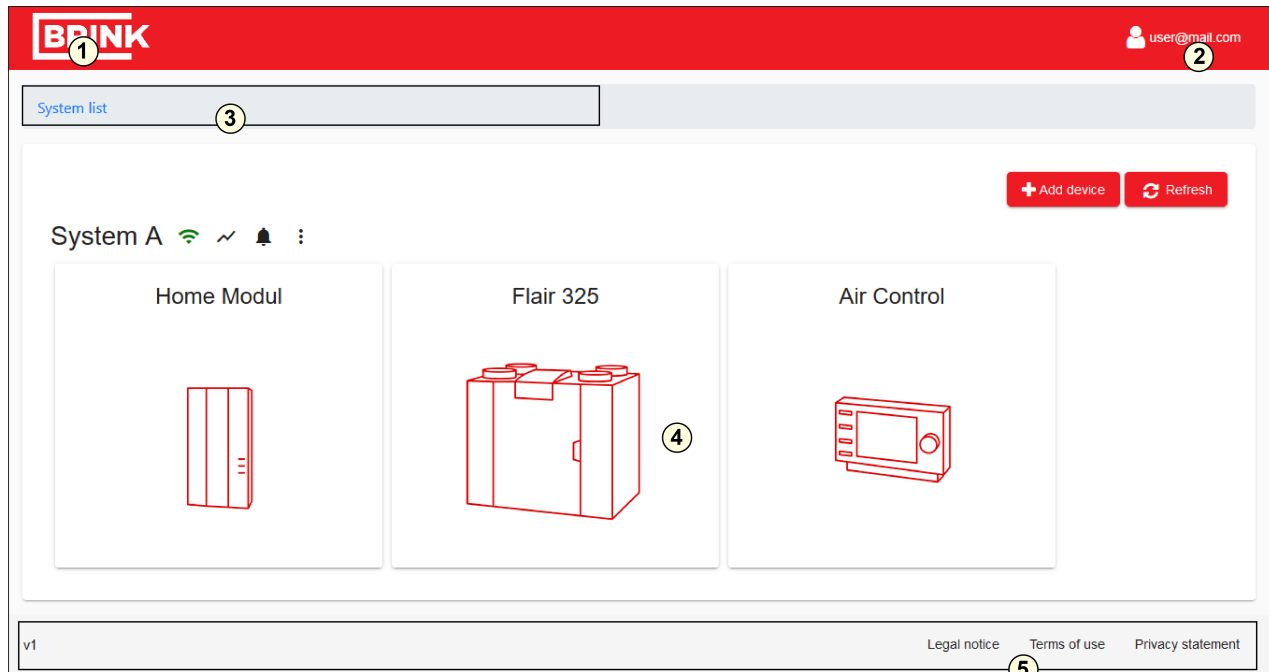

1. Brink Logo: Clicking this will bring you back to the home screen.
 2. Account menu: Change your account settings or log out of the portal.
 3. Navigation menu: Overview at which level you are and navigation to higher levels.
 4. Main portal area: Here you can view and change your system properties.
 5. Footer: Software version and legal statements.
- **Change your account settings**
By clicking on your account name in the top right corner you can access the account settings. In the first tab. You can edit your contact information and request an installer access.
 - **Change your account password**
In the second tab of the account settings you can change your password.
 - **Remove your account**
The last tab gives you the option to delete your account. Due to this all access- & system data will be lost.
 - **Log out of the portal**
By clicking on your account name in the top right corner you have the option to logout of the portal.
 - **Log into the portal**
Goto: www.brink-home.com and enter your e-mail address and password.
 - **Forgot your password**
If you forgot your password, there is a link below the login screen where you can enter your e-mail address. If the e-mail address is registered at the portal an automated mail will be sent. Follow the instructions of the mail to setup a new password.

4 Brink Home App

The Brink Home App allows you to control your ventilation system via a smart-device.



Note

To access the Portal and Brink Home App, you need to register.

After registration, you can log into both the portal and the app using the account created.

Note

Adding installations to your user account can only be done in the portal, not in the app.

4.1 System requirements

The Brink Home App is available free of charge for iOS or Android operating systems via Apple App Store or the Google Play Store.

System requirements:

Note

Apple appliances with operating system from iOS 13.

Note

Android appliances with operating system from 7.0.


4.2 login

Open the app.

Click "Login".



Android

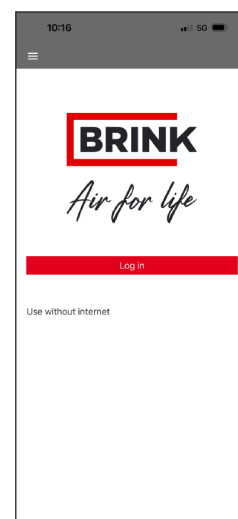


Apple


Enter e-mail and password
(created in → [Create Brink Home account](#) -> page 8).

Check "remember login details" if desired

Click "Login".

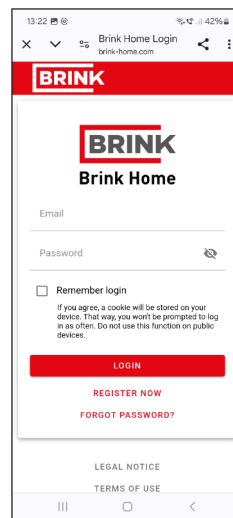


Android

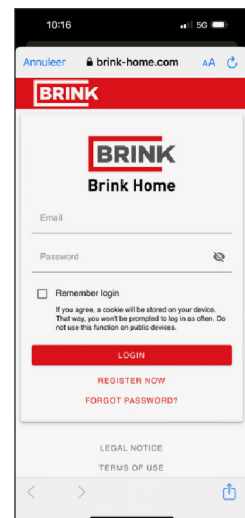


Apple

After first logging into the app, an appliance needs be selected.

Click "attachment list"

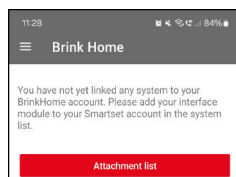

Select the appliance

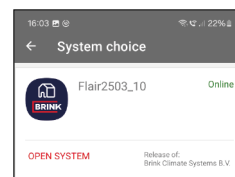

4.3 Operation Brink Home App


4.3.1 Screen "Menu"

Via the menu button "☰", the 'Menu' page is reached.


When connected to the internet, the system name under which the user is logged in is displayed next to the menu button.

On the "Menu" page you will find:

- Logged in as + e-mail address
- Logged out
- Language
- System selection
- Delete account
- To the web portal
- Colophon
- Protection declaration
- Conditions of use
- About this App

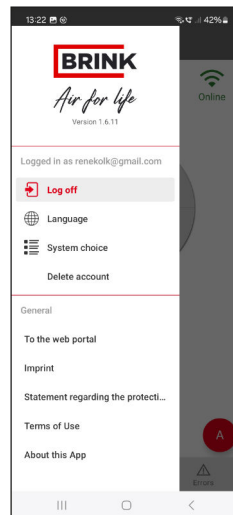

Android

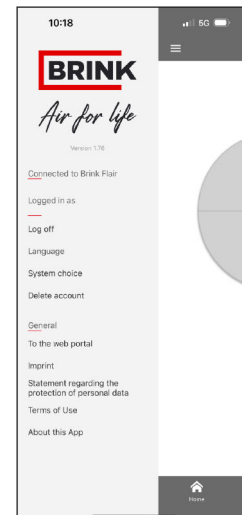

Apple

4.3.2 Screen "Home"

The "Home" button takes you back to the main screen.

In the Home screen, you can select in which ventilation mode your ventilation system should run. You do this by pressing one of the 4 circle segments in the main screen.



Click "A" to select an automatic mode → [Screen "Ventilation modes"](#) -> page 31.




Note

Ventilation position 0 (holiday mode) blocks all external controls

Ventilation settings

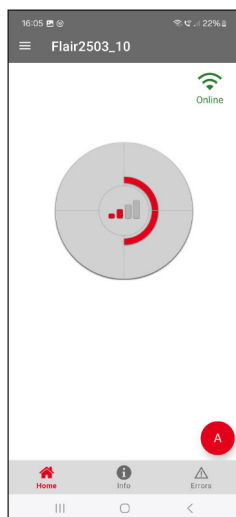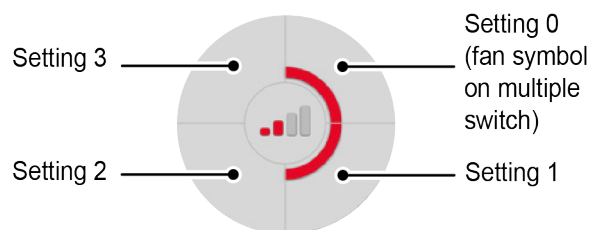

Android

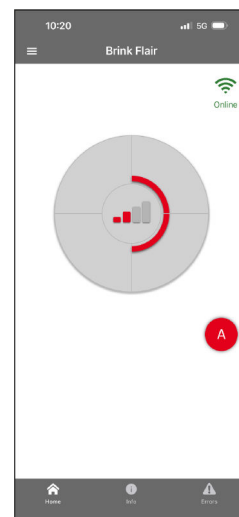


Apple

Fault message/Filter message

Depending on the situation, the main screen may display a filter message or a fault message.

The message will automatically disappear when a filter reset has been carried out on the ventilation system or when the fault has been remedied.

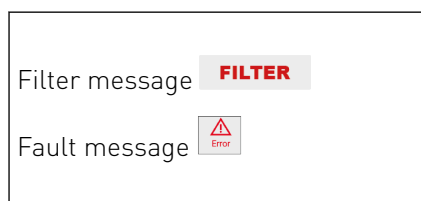


4.3.3 Screen "Info"


The 'Info' button on the 'Home' screen allows you to read out system data.

The information display of the ventilation system depends on any accessories connected.

An example is shown in images to the right.

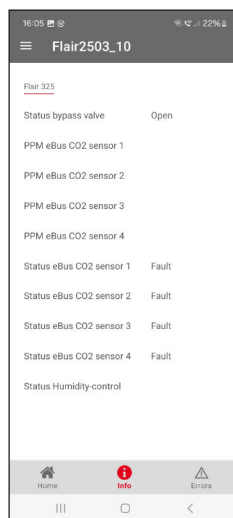


Android

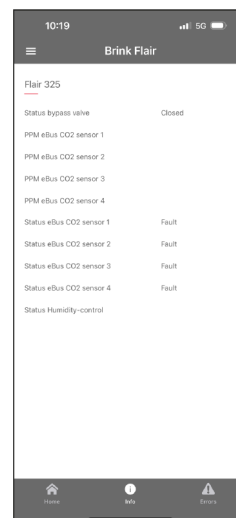

Apple


4.3.4 Screen "Errors"

You can use the button "Errors" to check what fault is active, if any.

An error will be displayed in the main screen with the icon “”.



Android

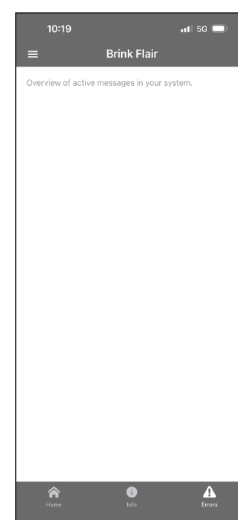

iOS

4.3.5 Screen "Ventilation modes"


In the main screen you can choose the ventilation mode in which you want your ventilation system to run. You can do this by pressing one of the 4 circle segments in the main screen.

In addition, the App also offers a choice from one of the preprogrammed ventilation modes.

In addition to the various ventilation modes, several system configurations are possible. The table below shows the available main screens.



Android

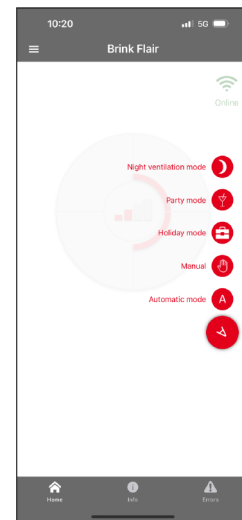


IOS


Night ventilation mode

As standard, this mode switches the ventilation system to ventilation mode 2 (presence mode) and opens the bypass valve. This mode remains active for 8 hours.

If desired, the user may change this ventilation mode. When that period has lapsed, the ventilation system is reset to automatic mode or manual control. The bypass valve will also be back to automatic mode.

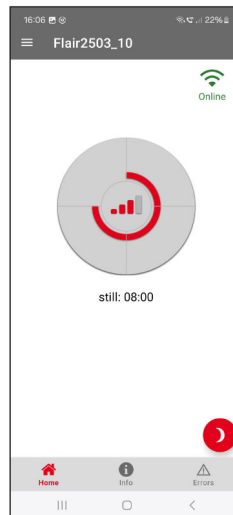


Android

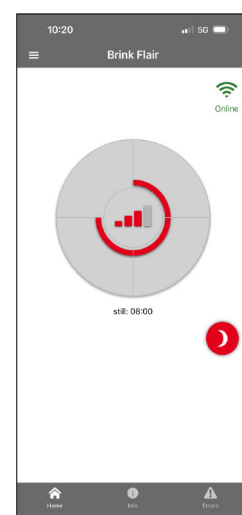


IOS

Party mode

This mode switches the ventilation system to ventilation mode 3 (highest ventilation setting) and remains active for 4 hours. When that period has lapsed, the ventilation system is reset to automatic mode or manual control.

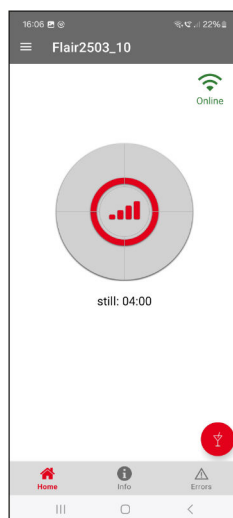


Android

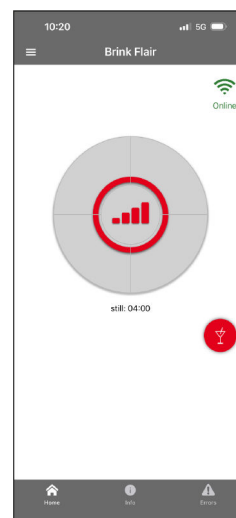


iOS

Holiday mode

This mode switches the ventilation system to ventilation mode 0 (fan symbol) and switches off any connected accessories (e.g. CO₂ sensor). The holiday setting remains active until a different preprogrammed ventilation mode is selected.

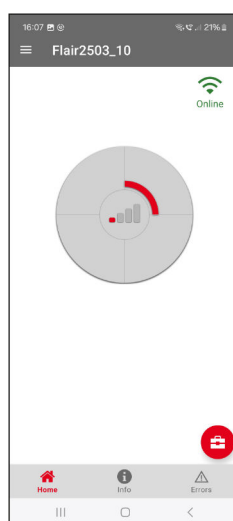

Android

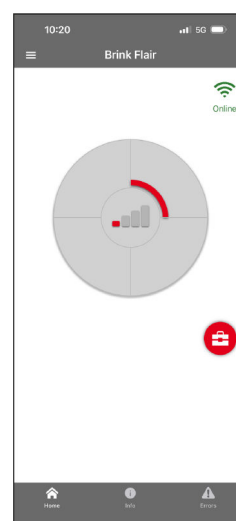


iOS


Manual control

This mode makes the ventilation system run in a certain ventilation mode and, if necessary, switches off any connected accessories (e.g. CO₂ sensor). This mode remains active until a different preprogrammed ventilation mode is selected.

Note: The CO₂ sensor is only switched off if the demanded flow rate in manual mode is higher than the demanded flow rate of the CO₂ sensor (The control with the highest demanded flow rate is leading).

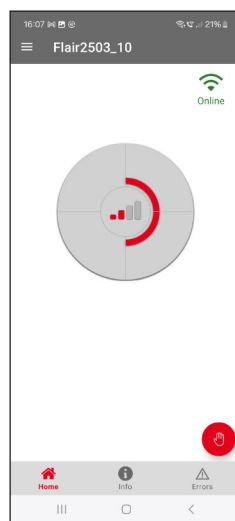


Android

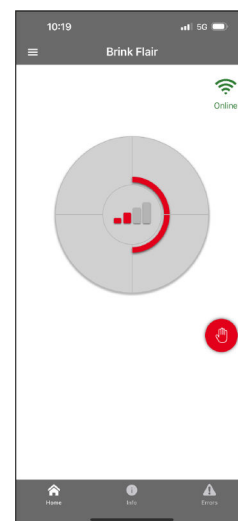


iOS

Automatic mode

This mode ensures that any connected accessory (e.g. CO₂ sensor) automatically controls the ventilation system.

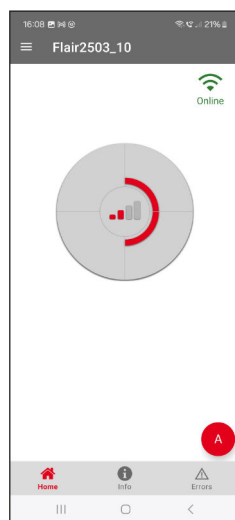

Android

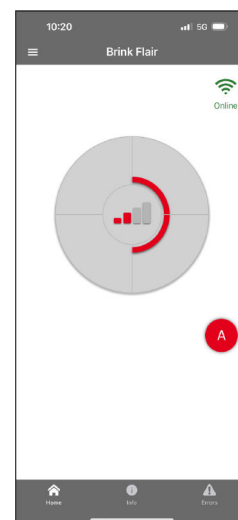

iOS



Brink Climate Systems B.V.

Wethouder Wassebaliestraat 8, NL-7951SN Staphorst

T: +31 (0) 522 46 99 44

E. info@brinkclimatesystems.nl

www.brinkclimatesystems.nl