


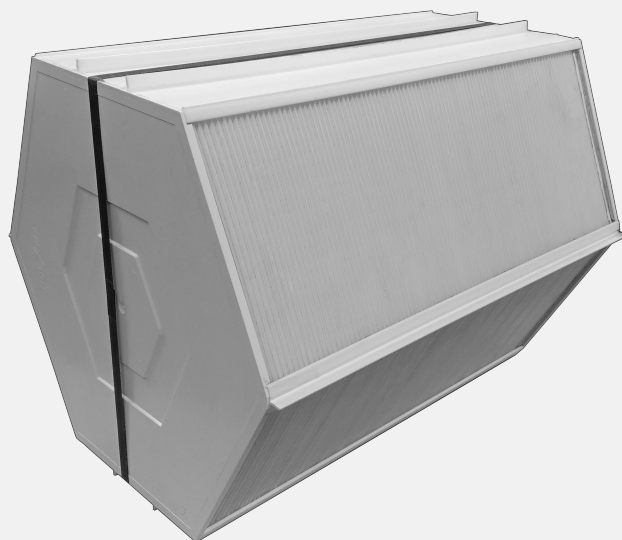

Installation regulations


Flair Enthalpy Heat exchanger
English




Air for Life

Mounting Flair Enthalpy Heat Exchanger


1

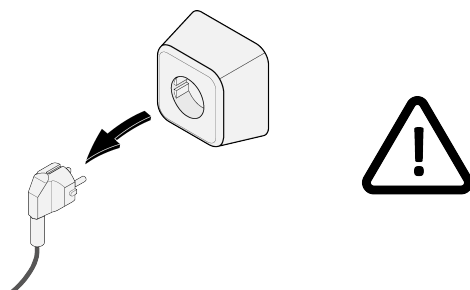



2

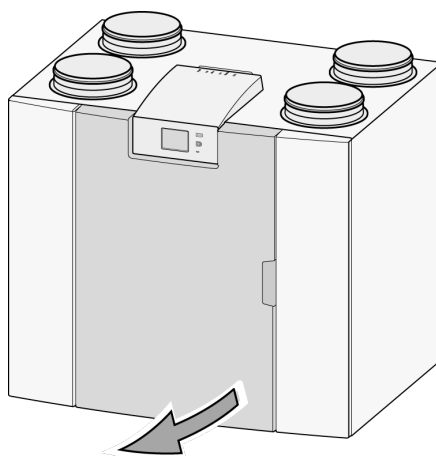



3

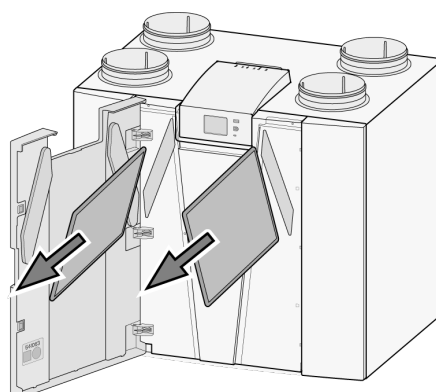

4

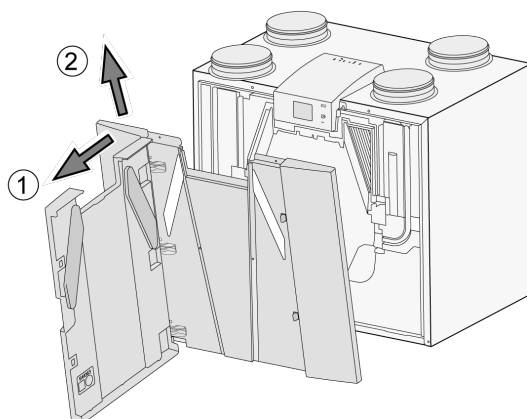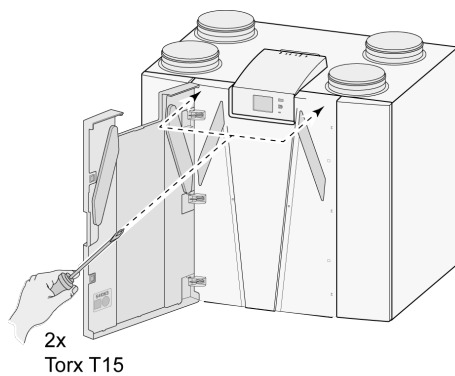


5

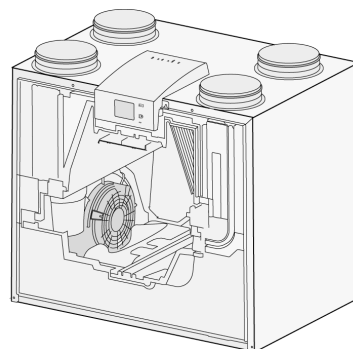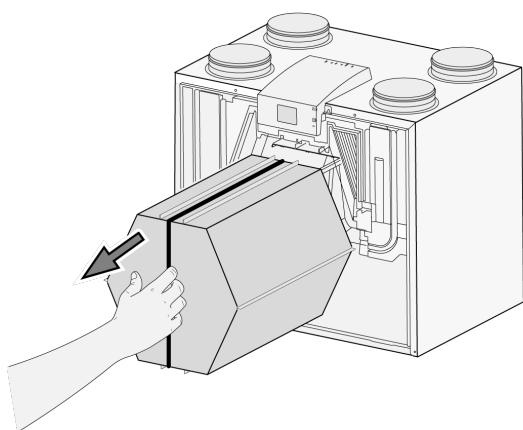



6

Place the enthalpy heat exchanger into the appliance.

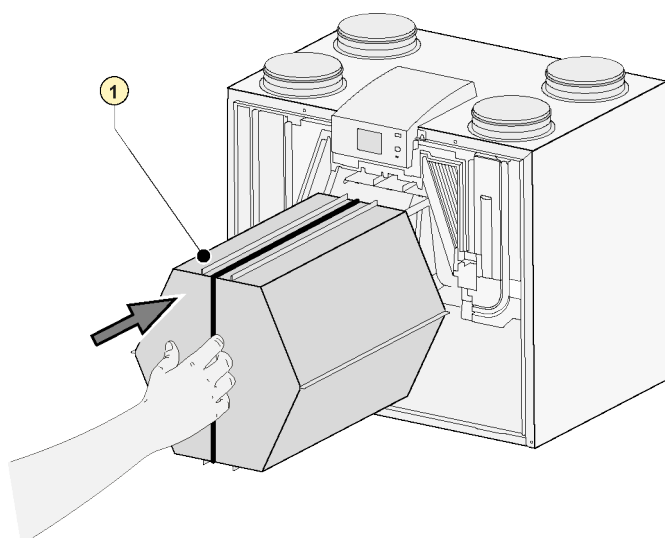


1 = Enthalpy heat exchanger
Article code: 532710


7

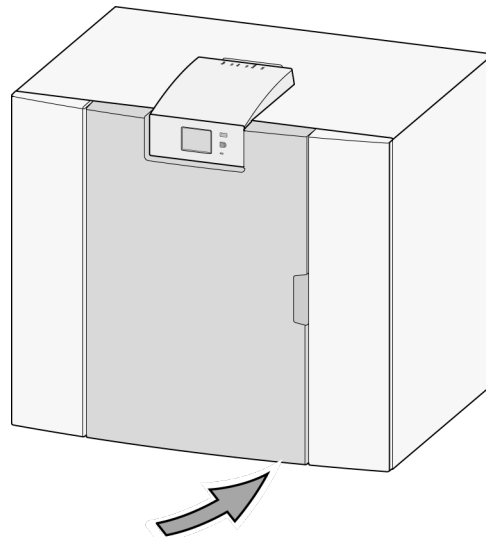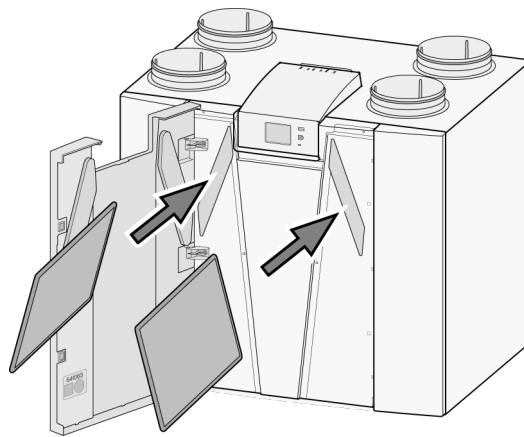

- 8** A = Remove condensate discharge.
B = Close the condensate discharge with the supplied cap.

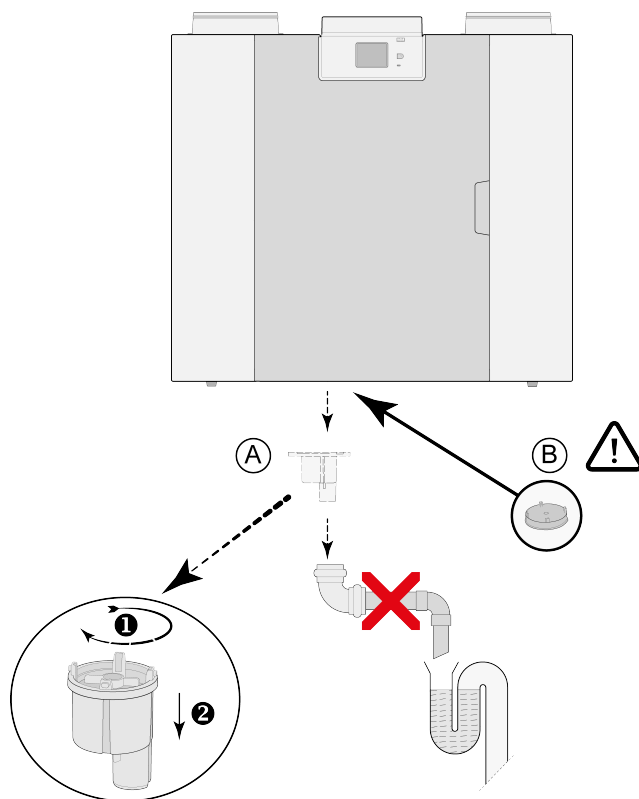

9

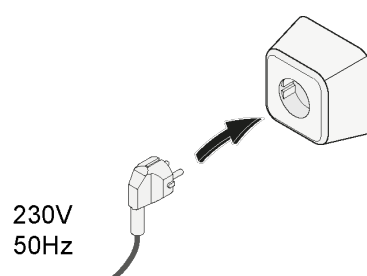



Brink Climate Systems BV
P.O. Box 11 NL-7950AA Staphorst
T +31 (0) 522 46 99 44

E info@brinkclimatesystems.com
www.brinkclimatesystems.com
www.brinkairforlife.com