



Air for life

Installation regulations


Heat exchanger Flair Enthalpy

English




Mounting Flair Enthalpy Heat Exchanger (Flair 325 used as example below)


1

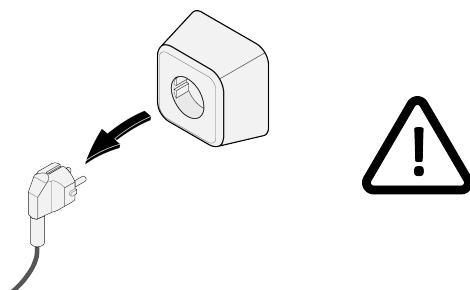



2

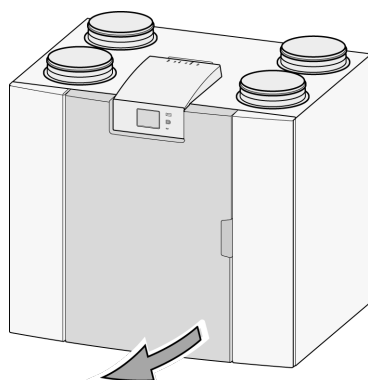



3

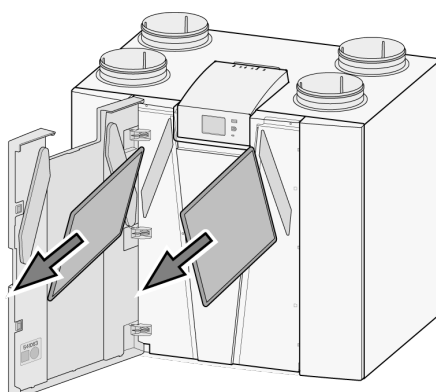

4

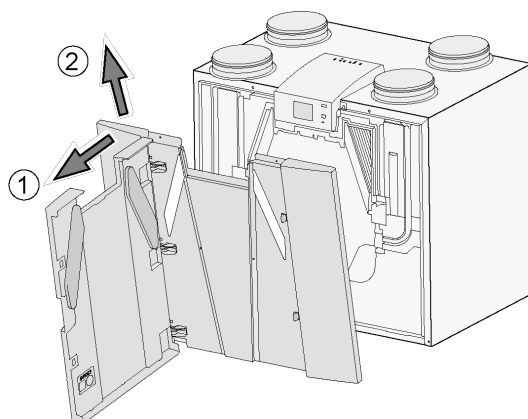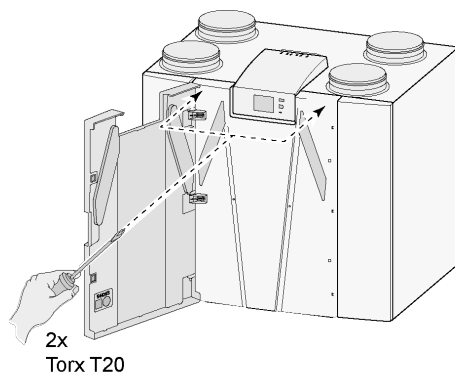


5

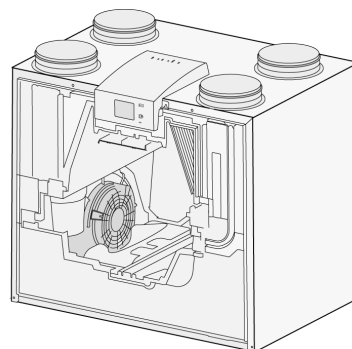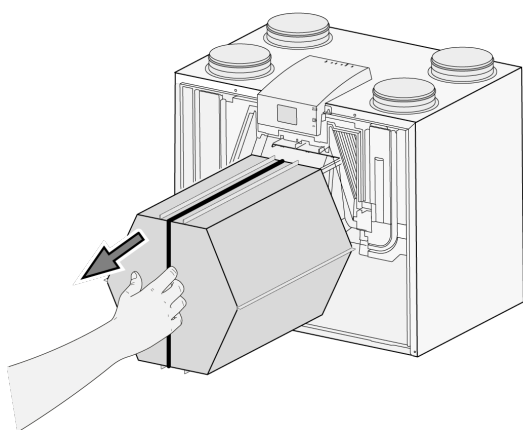

6

Place the enthalpy heat exchanger into the appliance.


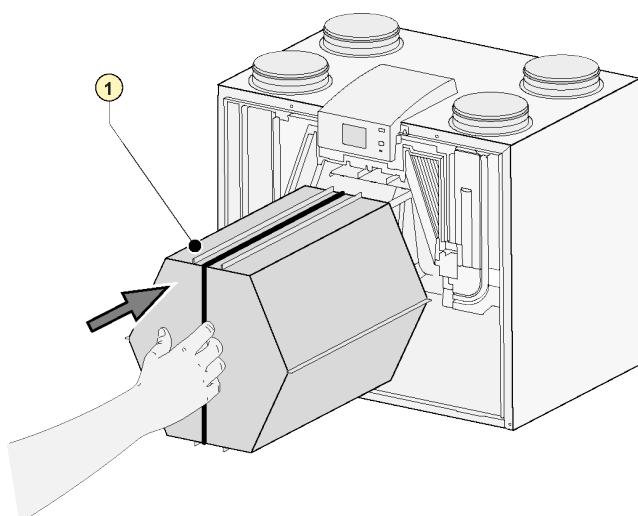


1 = Enthalpy heat exchanger
(Flair 200 and 225 article code:
532748)


(Flair 300, 325 and 400 article
code: 532710)

(Flair 450 and 600 article code:
532962)


7

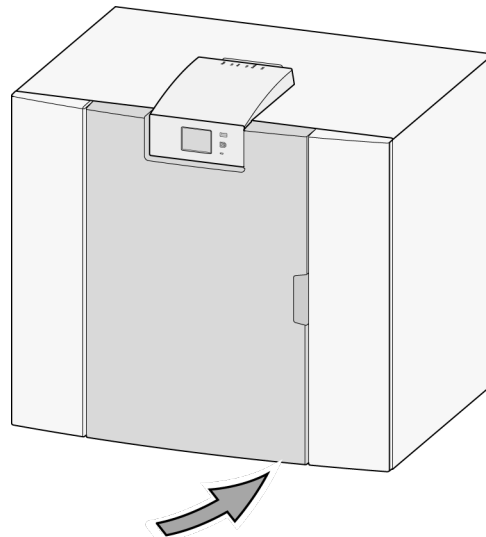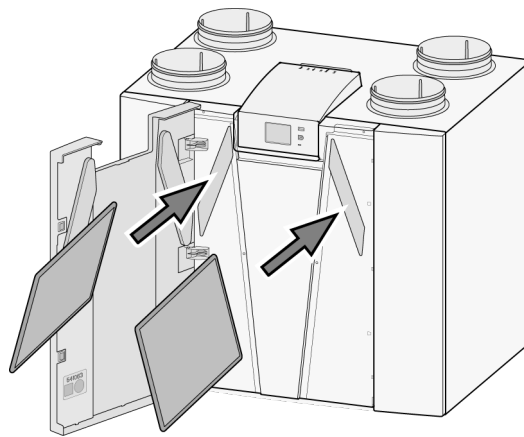

- 8** A = Remove condensate discharge.
B = Close the condensate discharge with the supplied cap.

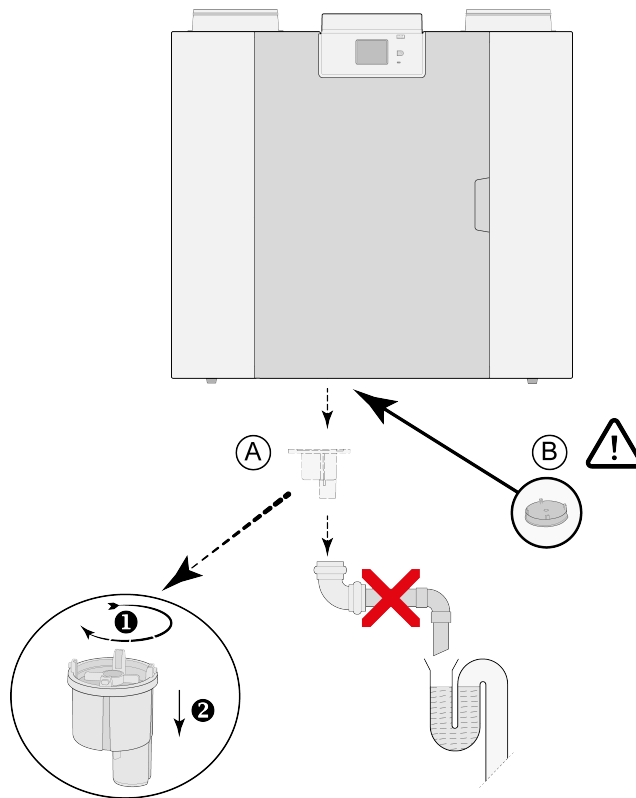

9

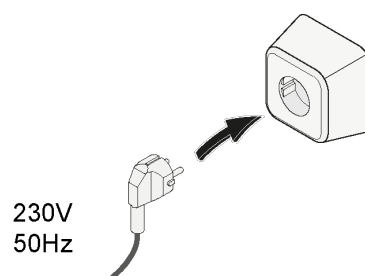

Brink Climate Systems B.V.

Wethouder Wassebaliestraat 8, NL-7951SN Staphorst

T: +31 (0) 522 46 99 44

E. info@brinkclimatesystems.nl

www.brinkclimatesystems.nl